



## INSTALLATION GUIDE







Requirements:-


Concealed ALA-CHR-509121 Concealed body  
single lever bath mixer



\* Representative image

- ◆ Pencil for marking, Screw driver, Teflon Tape, drill machine etc.
- ◆ Water connection Hot & cold 1/2" BSPP
- ◆ Recommended water pressure:- B/W 2-3 bar

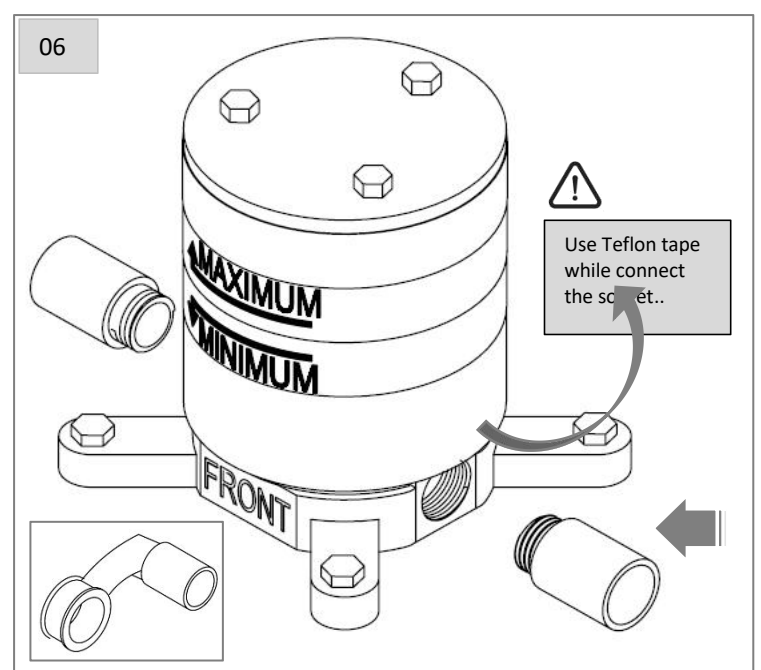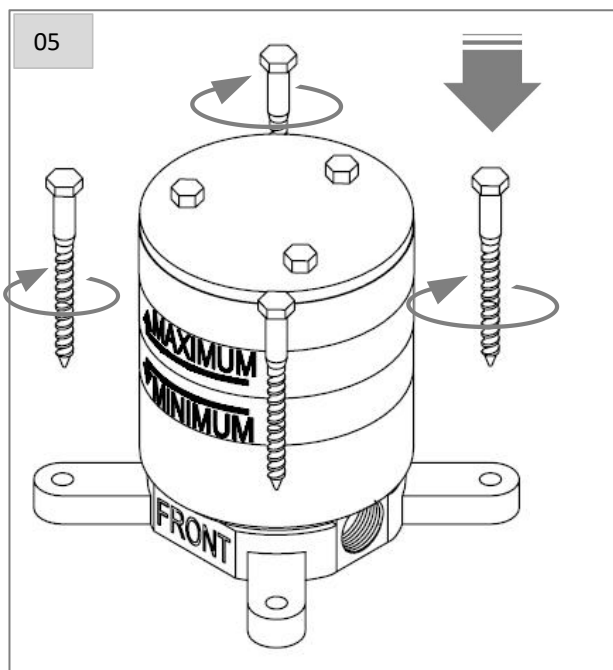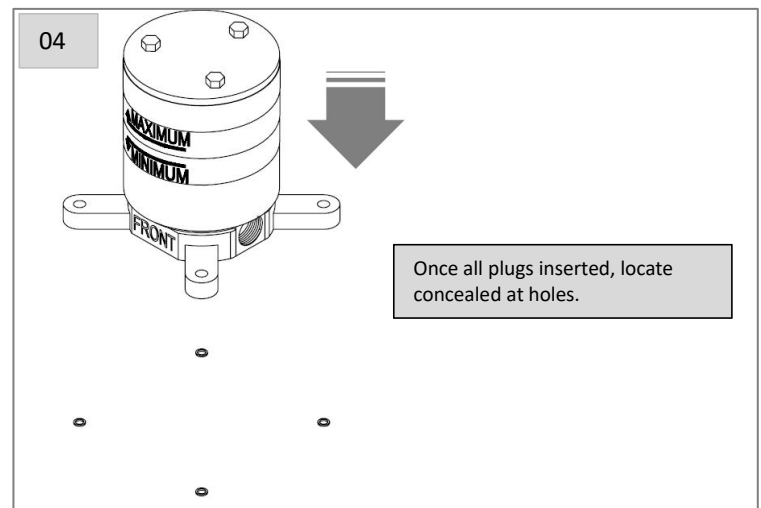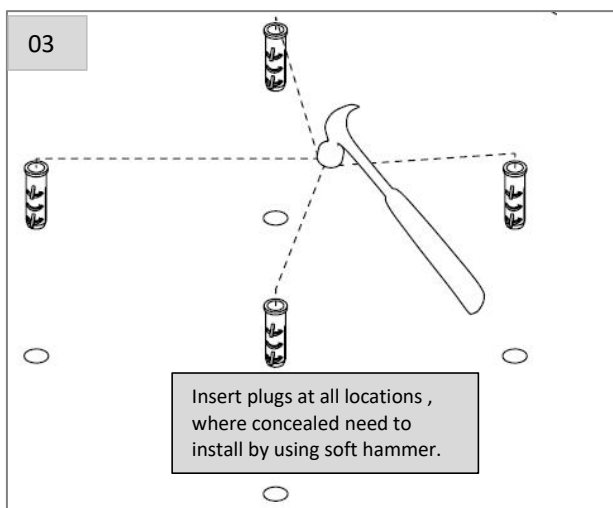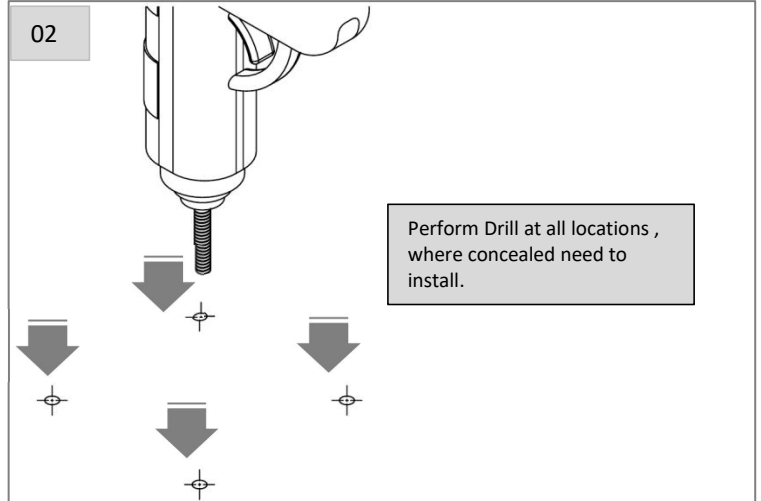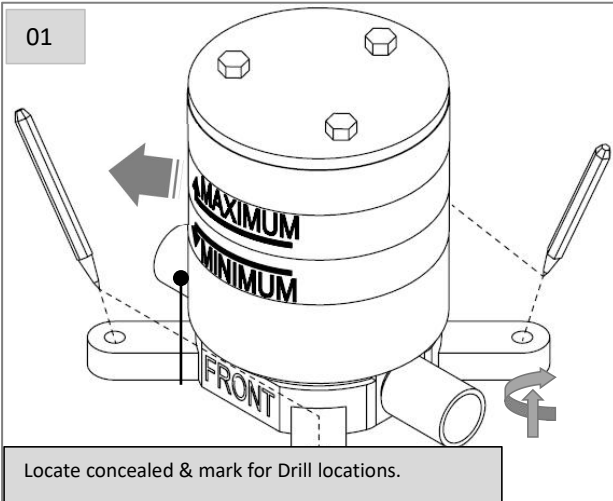

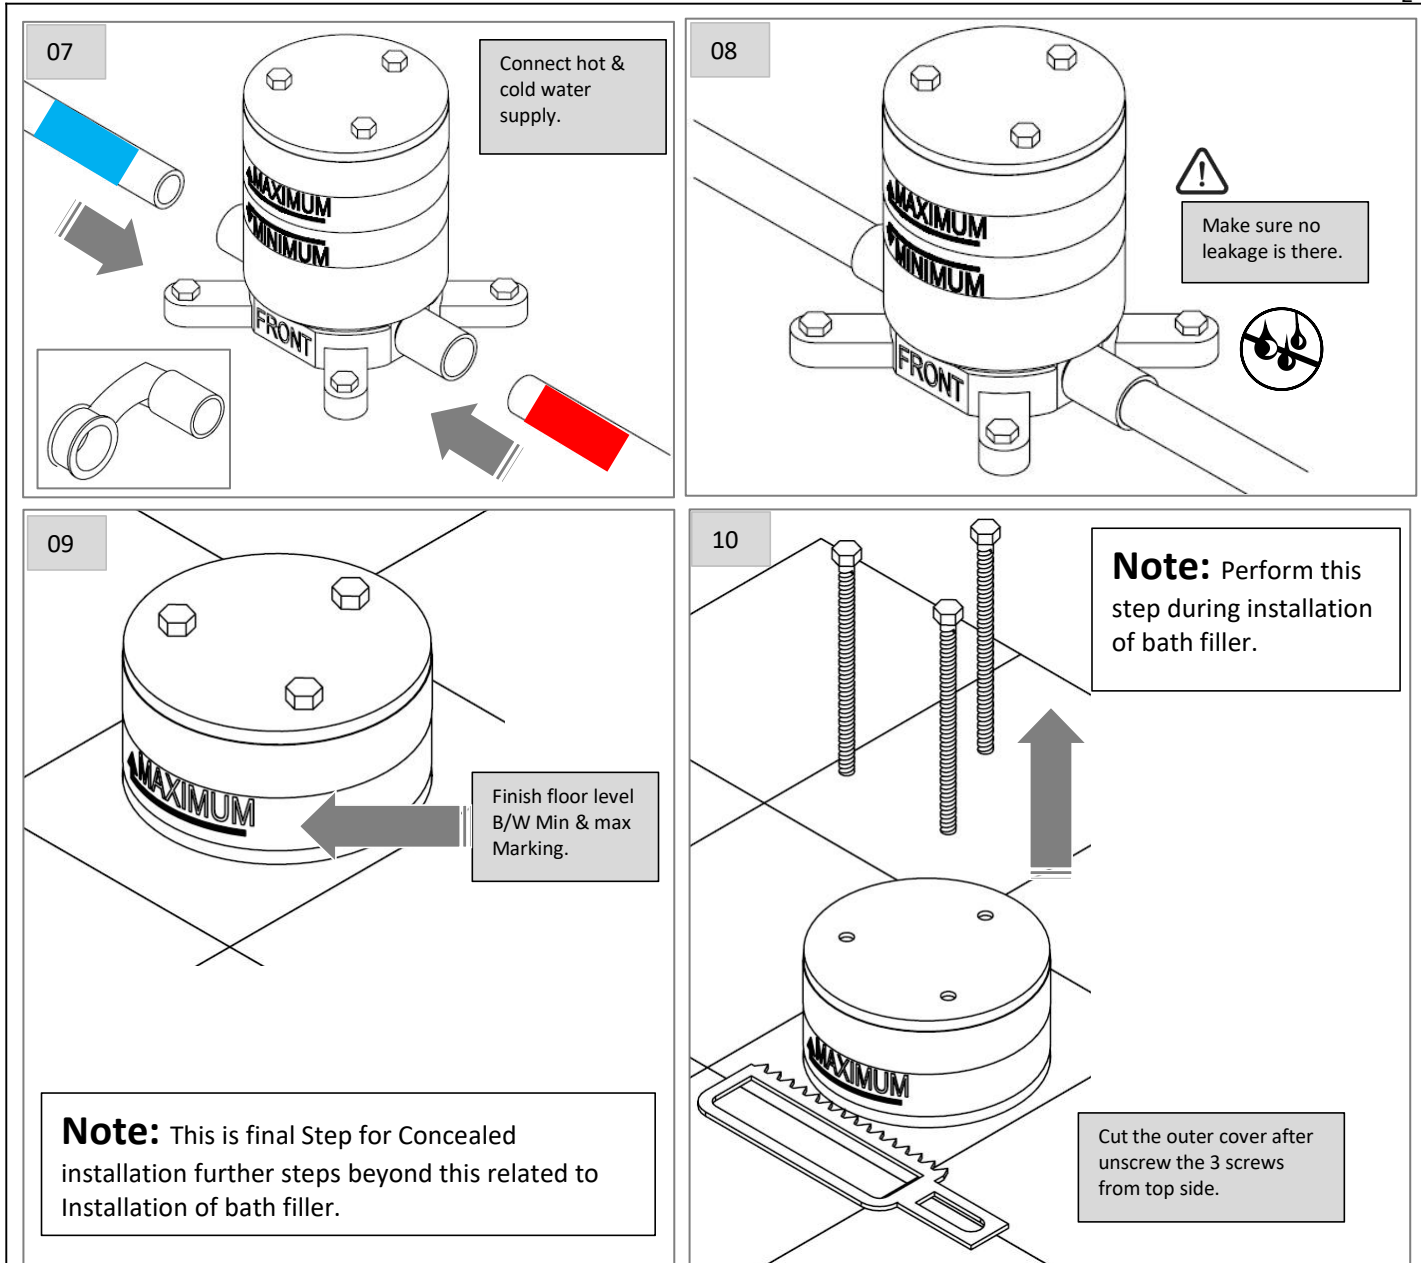

### Installation Safety Guidelines

Always turn OFF the main water supply before starting installation to avoid leakage or flooding.  
Check Pressure Limits

Ensure water pressure is within recommended range (usually 2–3 bar).  
Use correct tools (drill machine, level, screwdriver) to avoid damage to fittings and ensure secure installation.  
Correct Alignment

Ensure the concealed body is installed straight and level. Misalignment can cause improper fitting of the final trim.  
Follow Marking Levels.

Maintain the minimum and maximum level markings to ensure proper depth inside the floor.  
Secure Fixing

Tighten all screws and anchor bolts properly. Loose installation may cause vibration or leakage over time.  
Use Teflon Tape

Apply Teflon tape on all threaded joints to prevent water leakage.  
Hot & Cold Connection Check

Cover the concealed body properly to prevent dust, debris, or cement from entering during flooring work.  
Qualified Installation